

OPERATION MANUAL

LIGHT BOY

MODEL B8Q5J-CE



Never attempt to operate or service this Lighting system until you have first read and understood all of the applicable Safety Instructions that are set forth in this Manual. The failure to comply with all relevant Safety Instructions could result in bodily injury. To assure that this Manual will be conveniently available to future users, store this manual carefully after use.

MEMO

Thank you for purchasing
LIGHT BOY B8Q5J-CE

- This manual provides informational and procedures to safely operate and maintain the LIGHT BOY Products.
Before using the unit, be sure to read and understand all of the instructions.
- Keep a copy of this manual with the unit at all times.
- In case of this manual is lost or damaged, please claim immediately to the dealer from which you purchased the unit, or contact LIGHT BOY.
For general or technical questions, please contact LIGHT BOY. Please have your serial number available.
- For safety and improvement, LIGHT BOY CO., LTD. and its affiliates reserve the right to change and modify the product without notice.

Operation Manual	LIGHT BOY B8Q5J-CE	Code NO.	B-0000471-00
------------------	-----------------------	----------	--------------

■ In order for you to use safely

- The three safety messages shown below will inform you about potential hazards that could injure you or others.

The safety messages specifically address the level of exposure to the operator and are preceded by one of three words:

DANGER, WARNING, CAUTION.

Obey all safety messages that are described in this manual to prevent the possibility of improper service, damage to the equipment, personal injury or death.

- General Safety Information



INDICATES A HAZARDOUS SITUATION WHICH, IF NOT AVOIDED, WILL RESULT IN DEATH OR SERIOUS INJURY.



Indicates a hazardous situation which, if not avoided, could result in death or serious injury.



Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

In addition, if not avoided, could result in property or equipment damage.

CONTENTS

◆ Notice for Safe Use	4
◆ Location of Warning Labels	12
◆ Product Overview	13
◆ How to Install	14
◆ Operation	18
◆ ON/OFF Switch	20
◆ Storage	22
◆ How to Replace Parts	25
◆ Optional Message Strip	27
◆ Maintenance	28
◆ Trouble Shooting	30
◆ Specifications	37
◆ Disposal	38
◆ How to Get Help	40

◆ Notice for Safe Use

1. Installation

Please install on a flat surface.

⚠ DANGER If it is installed in an unstable place, it may fall or be damaged.

- Install it on a flat surface where the legs can be fully deployed to prevent it from tipping over.


⦿ Always make sure the area (5m radius) around the lighting system is clear and safe.

⚠ CAUTION Please pay close attention to your feet during installation.

Never use in strong winds.

⚠ DANGER To prevent the lighting system from overturning, NEVER use in winds that exceed 7m/s (25km/h).

- If the balloon becomes dented by wind, please lower the mast to use.
- Place sand bags over the pentapod legs to improve stability.

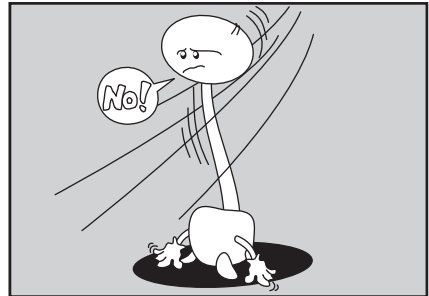

Do not use when the dent is too large caused by wind.

- To prevent balloon deformation, NEVER use lighting system in strong winds.

Keep clear of overhead power lines.

- Make sure the area above the lighting system is open and clear of overhead power lines and other obstructions.

⚠ DANGER Contact with overhead power lines or other obstructions could result in equipment damage, electrical shock, electrocution and even death.



Tighten the knob properly.




If the knob is loose, the lamp or mast may fall, resulting in injury or damage.

Beware of the unit may tip over by caster moving.

- The caster wheels may move by themselves while installing the pentapod. There is a risk of tipping over that could result in an accident.

Always secure the latch to prevent tipping over.

- The latch has two positions, upper and lower. Placing the latch in the lower position will provide 400mm (1.3 ft) more height.

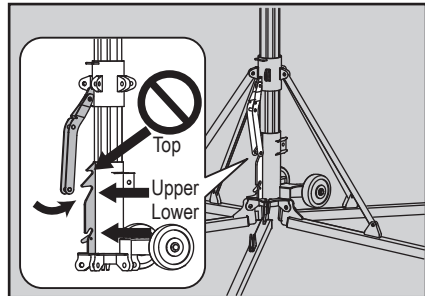

Be sure to secure the latch. If unit is used without securing the latch, the unit may tip over and lead to an accident.
Do not place the latch in the top hook during operations.

2.Transportation

Beware of the height.



Transporting the lighting system while the mast extended could collide with overhead obstructions.

Contact with overhead power lines or other obstructions could result in equipment damage, electrical shock, electrocution and even death.

- Before transporting by vehicle, always place the system in the stow position.

Never put LED unit/balloon assembly directly during transport.



Placing the balloon directly on a platform of truck could lead to a damage to the balloon.

- ALWAYS place the components into protective cover during transport. Fix them firmly on the platform.
- Please make sure that the storage case is closed properly before transporting.

Do not make an impact to lamp.




A strong impact may significantly reduce the life of the lamp or damage it.

- Please be careful when transporting, loading and unloading.

Be careful during transporting.

- Before transporting the unit, always make sure following:
 - The unit is placed in the stow position.
 - All knobs are securely tightened.
 - Mast is locked with both a safe stopper and a lock lever.
 - Pentapod legs are securely tied up with velcro straps.
- Be careful of moving wheels, the unit could move due to its own weight.

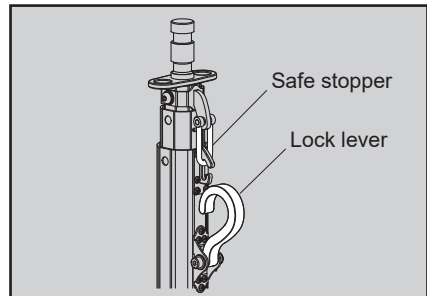

3. Balloon

Do not touch the lamp when lamp is on.



Do not touch the balloon part due to the high heat emitting.

- Depending on the ambient temperature, the surface temperature of the balloon could increase to 80° (800W). Avoid touching it to prevent burns.



ALWAYS keep the balloon away from fire, excessive amount of heats and sharp objects. Replace balloon immediately if damaged. A damaged balloon will not inflate properly, and may become more damaged by touching the hot lamp surface.

NEVER operate without opening the protective cover.



Balloon cloth is a consumable item.
Exposure to excess wind or rain could damage the balloon cover.



Always ensure the zippers at the top and bottom are closed.

- Make sure the zipper is completely closed before and during use.
- ALWAYS place the balloon inside its protective cover after each use. Wipe off dirt and mud before storage.

4. Mast

Be careful when raising the mast.



The mast is equipped with a gas spring. If the the lock and stopper were released without installing the balloon assembly, The mast POPS OUT and results in physical damage or hurt.

- Always install the balloon assembly when the stopper is released.

Pull the designated rope for lowering the mast.

- Pull the rope vertically to prevent the lighting system from overturning.



Never pull the power cable to lower the mast. It may cause electrical shock and damage to the lighting system.



There is a risk of friction damage inside the mast.
Pay attention to your head when pulling down the rope.


5. Generator

Use appropriate generators.



It may not light up due to generator matching issues.

- If an output power of the generator is not appropriate, the life of the generator will be shortened and the lamp may turn off or blink.

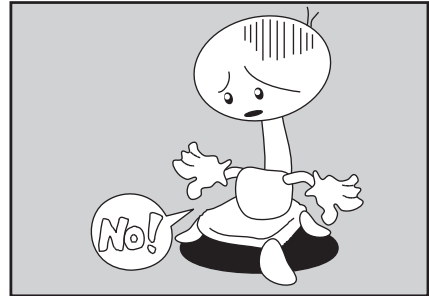

Please observe the handling precautions for the generator.

- If using a generator to power lighting system, refer to applicable generator manual safety information section.

6.Operation

Please note electric shock and leakage.

 DANGER




NEVER operate lighting system or handle any electrical equipment while standing in water, while barefoot, while hands are wet or in the rain. A dangerous electrical shock could occur, causing severe bodily harm or even death.

- Make sure the outlet is IP54 rated or above.
- The lighting system is not waterproof. Do not use it in rain or snow, in a place where it may be splashed with water, or immerse it in a puddle.
- STOP using the system immediately if submerged in water.
- The lighting system is equipped with a ground pin on the power plug. For your protection, ALWAYS complete the grounding path. NEVER insert the AC power plug into a 2-prong receptacle to operate lighting system. When applying power to the lighting system, ALWAYS connect the AC power plug to a 3-prong receptacle that is grounded.

Failure to follow could lead to electrical shock, electrocution and even death.

Please check the capacity of the generator when using the lighting system with other equipment.

- If there are any electrical appliances connected to the generator, please ensure that there is enough electrical capacity available for the lighting system.

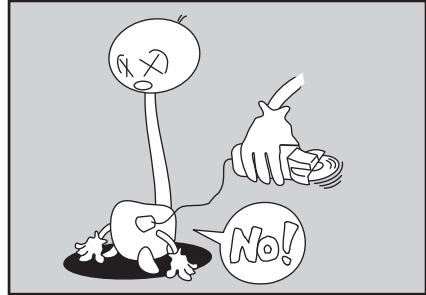

Do not apply any strong impacts.

CAUTION

A strong impact could damage the lamp and shorten the product life significantly.

Do not start or stop the generator with the power plug plugged in.

CAUTION

If you start or stop the engine with the power plug plugged in, the generator may be damaged.

- The status of the generator is unstable immediately after starting and stopping the engine. Do not insert the power plug of the lighting system until the generator is stabilized.

Do not attach or detach the connector while the power is on.

DANGER

There is a risk of equipment damage or electric shock.



- Before attaching or detaching the connector, remove the power plug.


7.Storage

Equipment should be stored in a clean, dry location out of the reach of children and unauthorized personnel.

⚠ CAUTION

ALWAYS keep the balloon away from sharp objects and excessive amounts of heat. Since protective covers and carrying cases are made of cloth, placing it in a hot place such as near a fire may cause deformation, kogation, or fire.

- Balloon cloth is a consumable item. ALWAYS place the balloon inside its protective cover after each use. This will prolong the life of the balloon material, keeping it protected from harsh environmental elements.
- Wipe off dirt and mud before storage. Lubricate and grease up the metal parts.
- ALWAYS store equipment properly when it is not being used.
- Please store it indoors as much as possible.
- If it is unavoidable to store it outdoors, cover it with a tarpaulin to avoid exposure to rain and snow.
- When storing the balloon removed from the mast, do not place it directly on the ground to prevent the rain water from penetrating into it.
- Do not store outdoors with the air inlet facing up.
- Do not leave the pentapod standing without properly securing it.

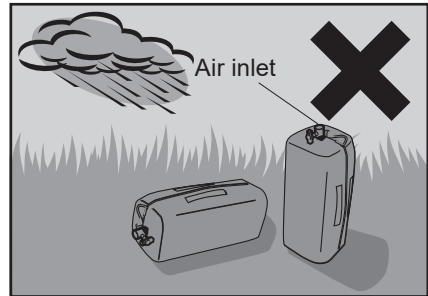

8.Other

Please note the power plug and terminals.

- Make sure that the power plug is free of dirt and foreign substances before inserting it firmly into the outlet.
- Unplug the power plug when not in use.

⚠ DANGER

Do not touch the power plug or terminals during operation. There is a risk of electric shock.





DANGER

ALWAYS stop using immediately, if the AC cable generates excessive amount of heats.

Please be careful during use.



WARNING

Watch your fingers and watch your steps.

Safety maintenance.

- Before and after use, be sure to remove mud and dirt, and perform inspection and maintenance such as lubrication and grease up.



CAUTION

Use grease for the maintenance. Do not apply parts-cleaner on the mast.

Please note the ambient temperature.

- The lighting system should only be used in temperatures between -10° to 40° C.



CAUTION

Failure to comply with these operating parameters could cause the lamp malfunction and shorten the ballast life.


General Safety.

- ALWAYS keep The lighting system in proper running condition. Fix damage to The lighting system and replace any broken parts immediately. When any malfunction occurs, please stop using immediately.
- Never operate this product under the influence of drugs or alcohol.
- Never operate this product when not feeling well due to fatigue, illness or when under medication.
- Please do not handle while wearing baggy cloth, ornaments which could possibly get caught in machine parts, or avoid wearing clothes with oil attached they can easily be flammable.
- Please dress properly for preventing injury, please wear a shoes with slipping protection.
- Please do not modify.
- Please take a look at surrounding when operating, and ensure the safety.
- If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.


◆ Location of Warning Labels

⚠ WARNING

This lighting system is equipped with a number of safety labels. These labels are provided for operator safety and maintenance information. The illustrations below and on the next page show these labels as they appear on the machine. Should any of these labels become unreadable, replacement can be obtained from your dealer.

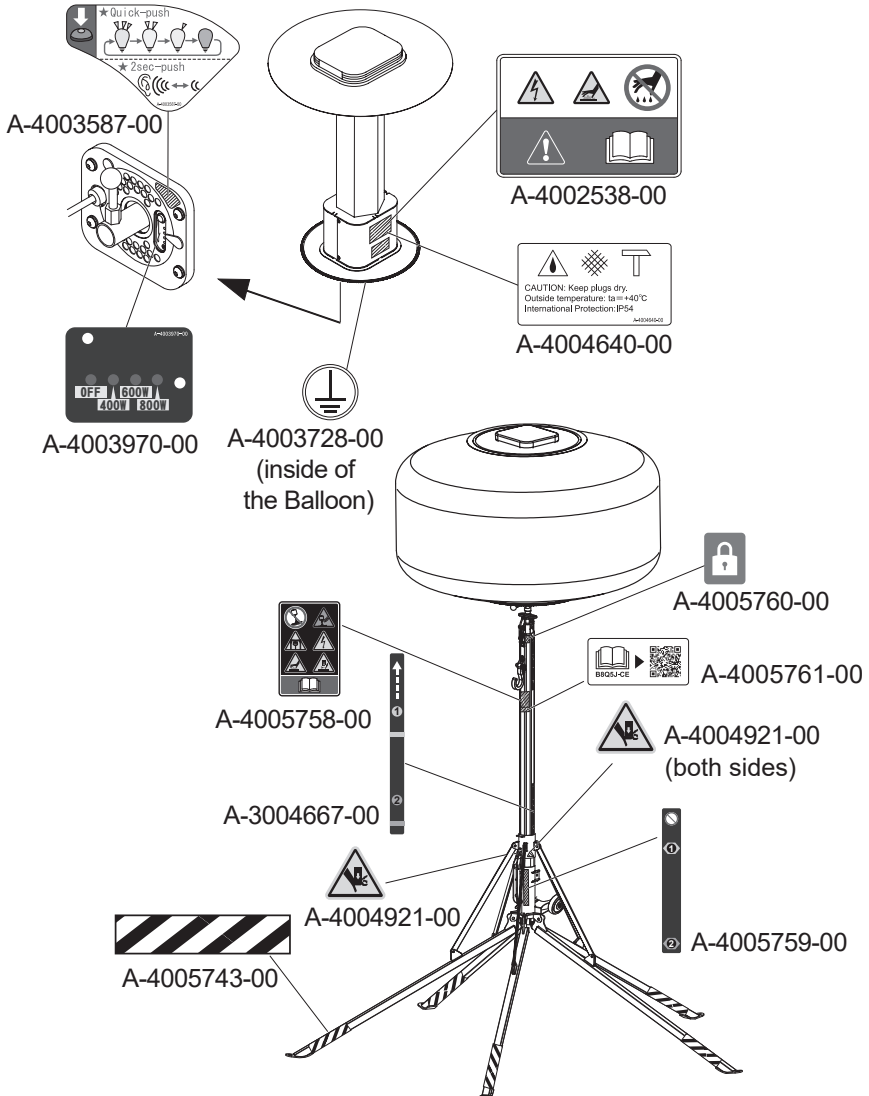

◆ Product Overview

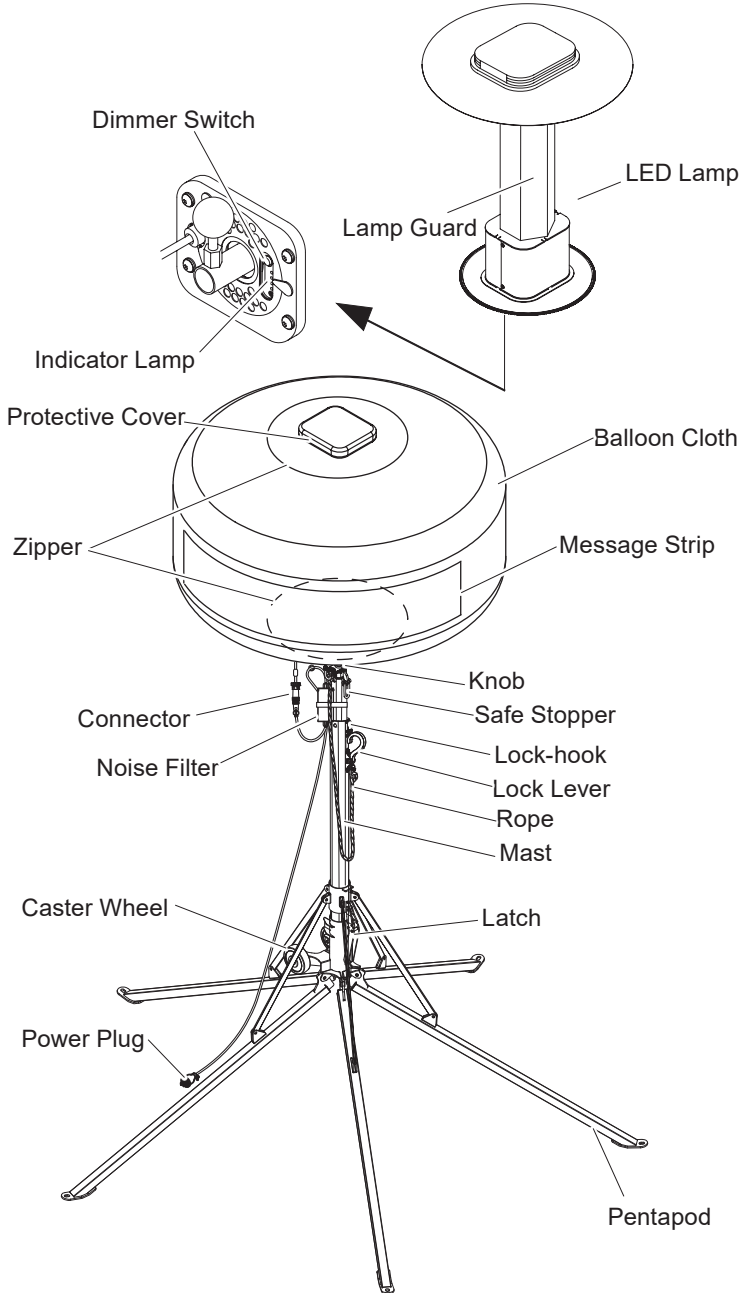

◆ How to Install

- Make sure there is enough space around the Lighting system solo for pentapod to be deployed.

⚠ WARNING


When install the unit, keep hands and fingers clear, prevent hands and fingers from getting pinched.



Do not drop the pentapod, or other components.

⚠ WARNING

The mast is equipped with a gas spring. It will automatically extend when unhooked. Do not remove the safe stopper from the lock-hook when the balloon has not been set on the top of the mast. The mast POPS OUT and results in physical damage or hurt.

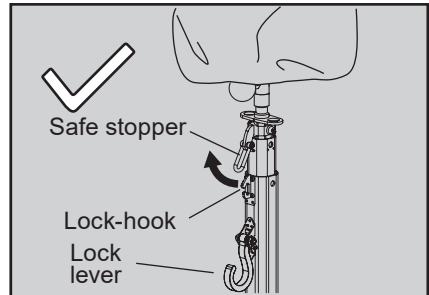


■ Installing the pentapod

1. Move the pentapod using caster wheels.


⚠ CAUTION

Keep both the safe stopper and strap securely locked when moving the unit. Please watch your steps.

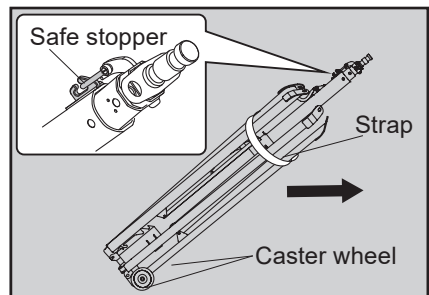


2. Squeeze both tabs on each side of buckle to unlock strap and allow pentapod legs to be deployed.

CAUTION Keep hands and feet clear.

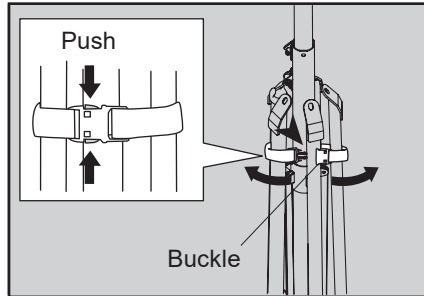


3. Pull upward on the mast and let the pentapod legs deploy.

CAUTION Make sure no obstacles around the pentapod. Be careful of colliding the opening legs with your body. Be careful of the pentapod being moved by itself.

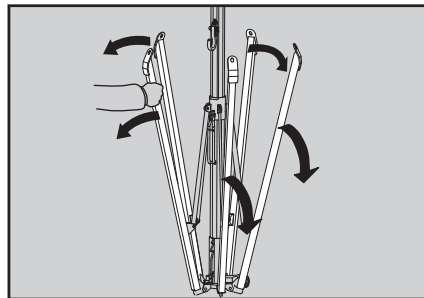


4. The latch will be set at top hook (Position 0) when the pentapod is deployed. Do not use it while it is set at top hook.

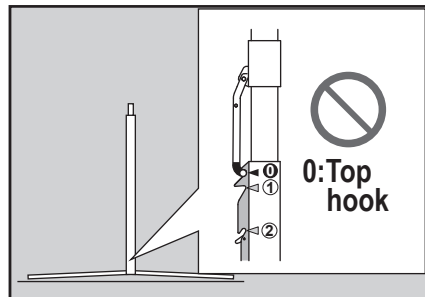


5. Hold and raise the mast to set it at the upper hook (Position 1).

DANGER Always hook the latch when it is in use. The possibility exists of tipping.

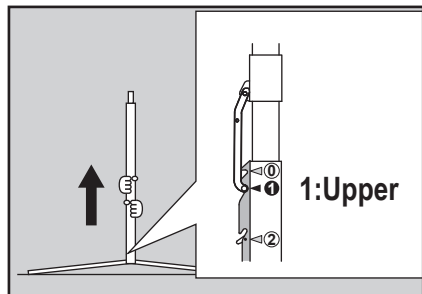


6. Hold and raise the mast to set it at the lower hook (Position 2).

☉ Placing the latch in the lower position will provide 400mm (1.3ft) more height.

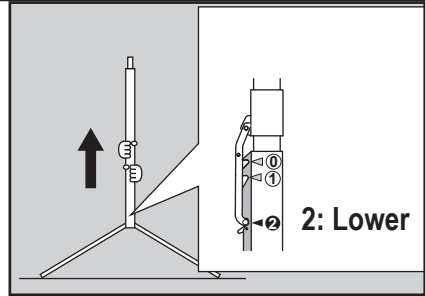

7. To improve stability and to prevent tipping of the unit, use rope and pegs, and place sandbags or a similar type of weight over the pentapod legs as shown on the right.


⚠ DANGER Always fix the pentapod securely. Tipping over or falling down of the pentapod could cause injury or damage.

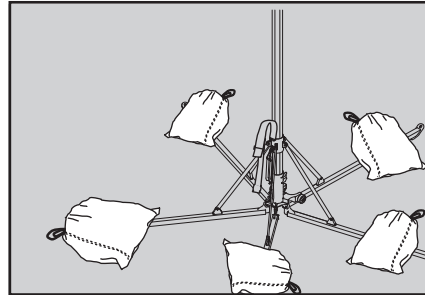

■ Installing the balloon


1. Place balloon assembly onto mast and tighten the knob securely.

⚠ DANGER Always tighten the knob securely. The balloon could possibly fall off and damage the equipment or result in injury.

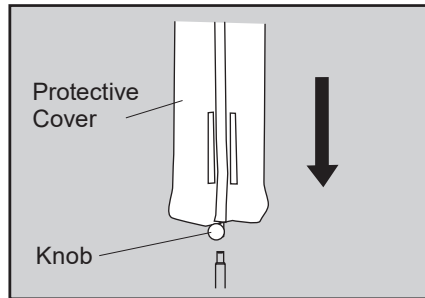


2. Open the loop fastener on the bottom of the protective cover.


Expose the balloon by pulling down on the zipper and unzip the protective cover as shown on the right. Also remove the AC power cord at this time.

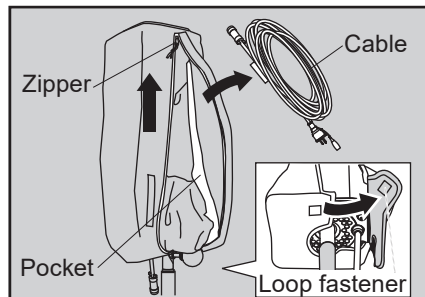


3. Fold the protective cover into itself and zip up.

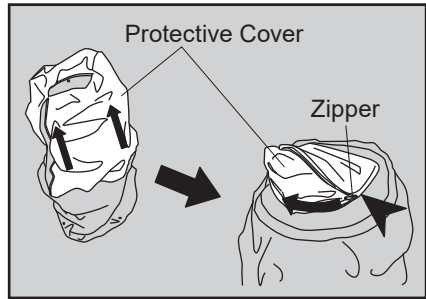

4. Hook the cable hook of the AC power cable into the metal fittings located on the bottom plate of the light assembly.

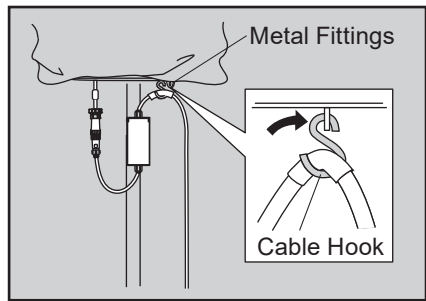

5. Bind the noise filter of power cable on the 3rd mast with cable tie.

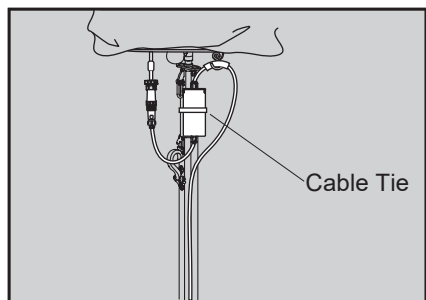

◆ Operation

■ Operating




ALWAYS make sure the area above the lighting system is open and clear of overhead power lines and other obstructions. Contact with overhead power lines or other obstructions could result in equipment damage, serious Injury or even death!




When raising or lowering the mast, keep hands and fingers clear of the various mast sections. This will prevent hands and fingers from getting pinched.

Raising the mast.


1. Release the lock lever. Hold the knob and pull it downwards vertically to release the safe stopper.

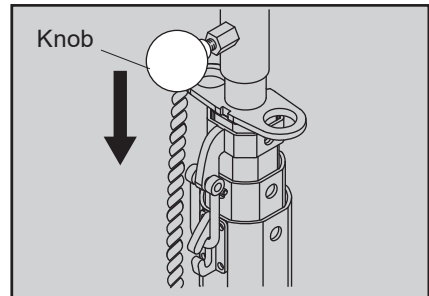


2. Release the safe stopper from the lock-hook.

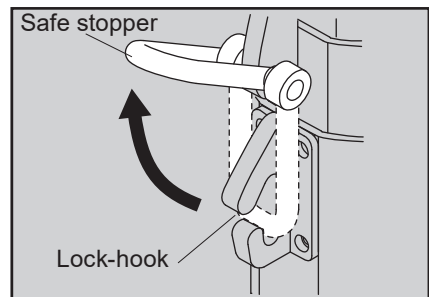

3. The mast starts to rise automatically to the maximum height.

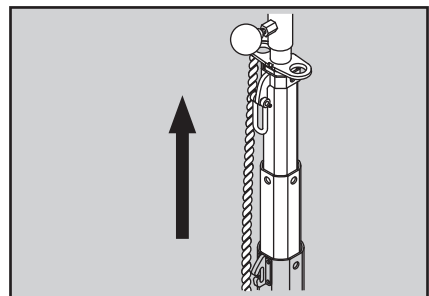


4. The mast will stop rising by applying the lock lever at the desired height.

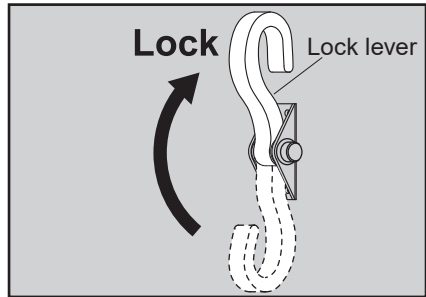


Lowering down the mast.

1. Pull down the lock lever to release the lock on mast.

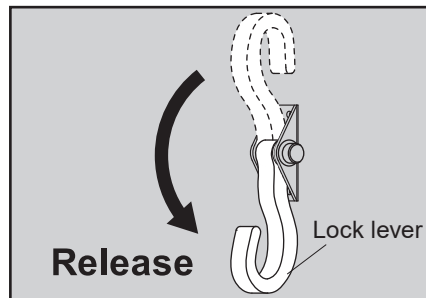

2. Pull the rope downward vertically until to the desired height. Apply the lock lever to lock on the mast.

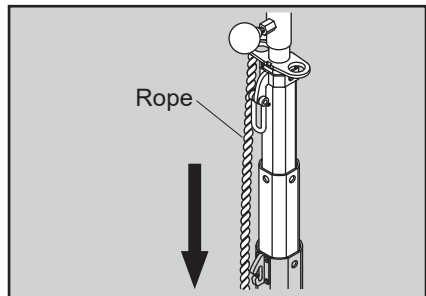

⚠ DANGER

When lowering down the mast please pull the rope vertically to prevent the lighting system from overturning.

⚠ CAUTION

Pay attention to your head, when lowering the mast.
Never pull the power cable to lower the mast. It may cause electrical shock and damage to the lighting system.

◆ ON/OFF Switch

■ Turning Lights ON

< Powering from Generator >

Ⓞ If there are any electrical appliances connected to the generator, please ensure that there is enough electrical capacity available for the lighting system .

Ⓞ Make sure the oil, fuel, and battery liquid are filled.



Ⓞ Make sure the main switch of the generator is OFF.

Ⓞ Make sure generator is properly grounded with the ground bar etc.

< Operating Dimmer Switch >


● The lighting system starts at 800W. Press the dimmer switch to control the brightness of the light. The light can be turned off or set to 800W, 600W or 400W.

The corresponding LED indicators will light in red when selected.

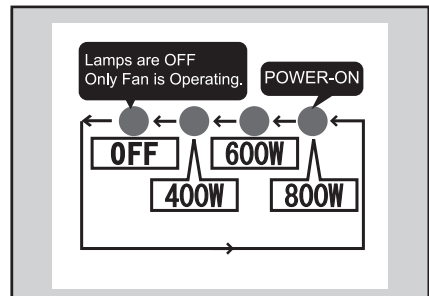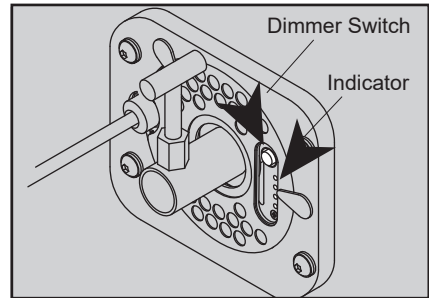

< Operating Silent Mode >

- The noise coming from the unit during operation can be eliminated. Press and hold the dimmer switch for 3 seconds.

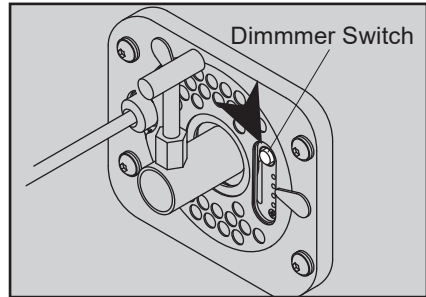

⊙ Blue LED on the center of the switch flashes in the silent mode.

- The silent mode works in only 400W. The dimming control is only available in order of [OFF] ⇄ [400W].
- To switch back to the normal mode, press and hold the dimmer switch for 3 seconds. The blue LED will stop flashing.

⊙ When unit is restarted, it will revert to normal mode even if silent mode was selected prior to shutdown.



■ Turning Lights OFF


- Turn off the power switch of the generator according to the generator's manual. The balloon should start to deflate and the lamp turns off.
- Always turn OFF the main switch of the generator before shut down generator.

◆ Storage


■ Stowing the balloon


1. Pull down the lock lever to release the lock on mast.

	WARNING When lifting or lowering the mast, keep hands and fingers clear of pinch.
	

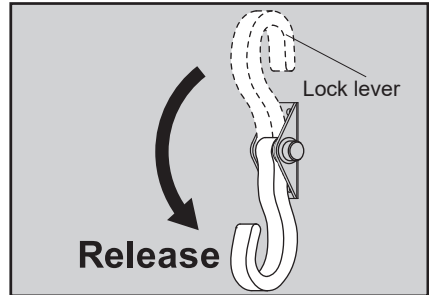


2. Pull the rope downward vertically to lower the mast.


	DANGER When lowering down the mast, pull the rope vertically to prevent the lighting system from overturning.
---	--

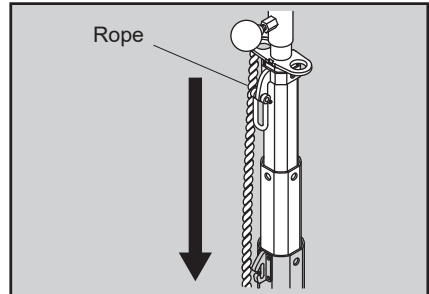


3. Set the safe stopper on the lock-hook.

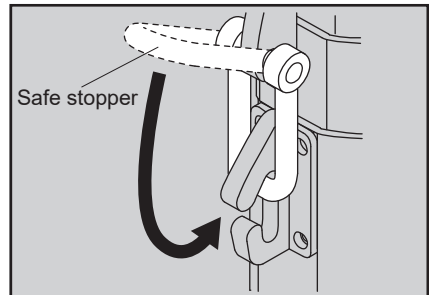


4. Disconnect the connector. Remove the cable hook of the AC power cable from the metal fittings located on the bottom plate of the light assembly.

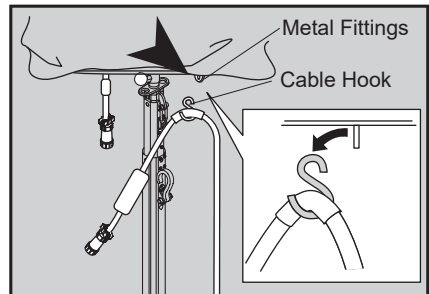

5. Unzip the zipper of the protective cover and roll down it over the balloon cloth.

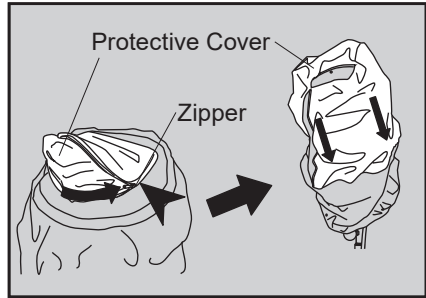


6. Store the power cable inside the pocket of the protective cover. Zip up the protective cover and loop fastener at the bottom of the protective cover.

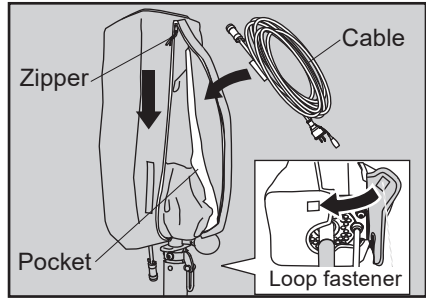


7. Loosen knob and lift up balloon lighting unit to remove from the mast.

CAUTION Please make sure the mast is locked before removing the balloon. There is a possibility of the inner masts POPPING UP rapidly.

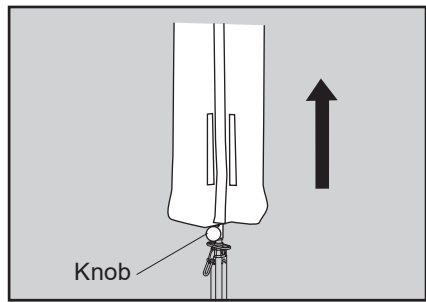


■ Stowing the pentapod

1. Hold and raise the mast to set the latch from the lower hook (Position 2) to the upper hook (Position 1).

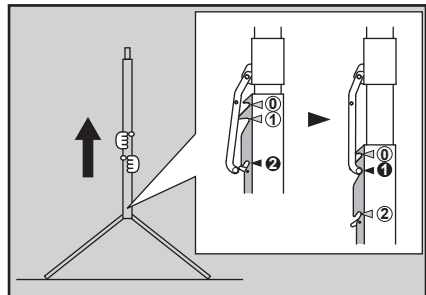


2. Hold the mast and pull up the strap to set the latch from the upper hook (Position 1) to the top hook (Position 0).

© Always hold the strap to release the latch.

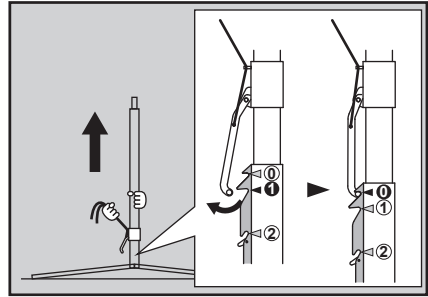

3. Grab one of the legs. Pull upward until all legs are fully retracted and are in the stow position. Place the strap around all 5 legs.


WARNING When stowing the mast, keep hands and fingers clear of pinch point.

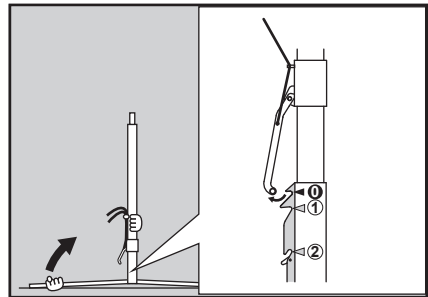

WARNING When pulling upward the pentapod, do not tilt the mast towards casters. There is a possibility of the pentapod being slipped by the casters. It could cause injury or damage.

4. Secure legs by inserting the both sides of buckle into each other.


WARNING The mast could extend during stowing. Always place the safe stopper and the lock lever to avoid damages and injury.

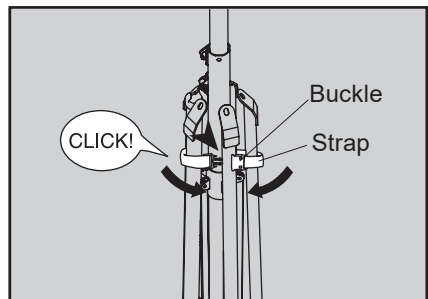


◆ How to Replace Parts

Replacing balloon cloth.


1. Unzip the zipper at the top and bottom of the balloon cloth.

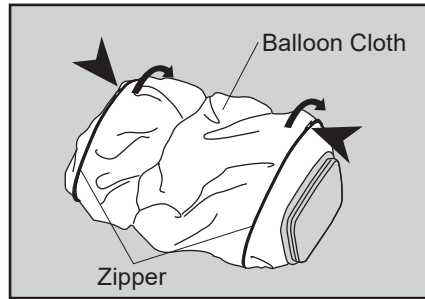


2. Slide the old or worn balloon cloth over the top of the lamp guard assembly.

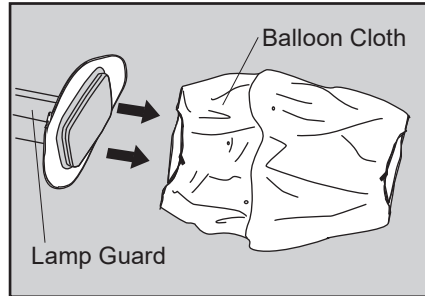

3. Slide the new balloon cloth over the top of the lamp guard assembly.

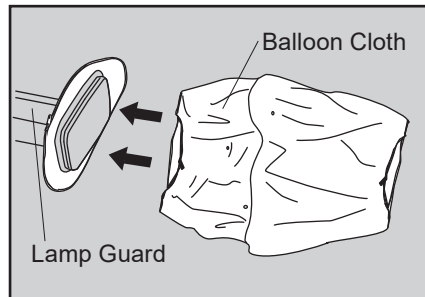


4. Zip up the zipper at the top and bottom of the balloon balloon.

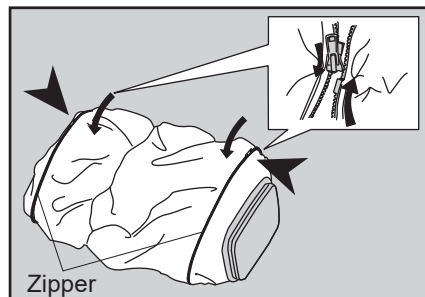


Replacing filter.

1. Remove the balloon as described on the right. Turn the balloon assembly upside down to access the filter.


⚠ CAUTION The mast is spring loaded. Before remove the balloon make sure the mast is locked. There is a possibility of the mast rapidly shooting out.

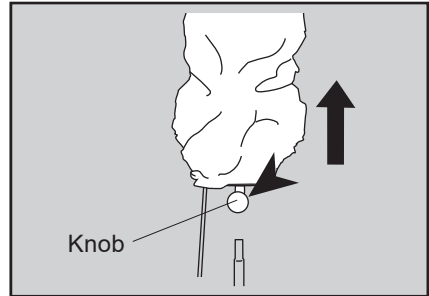

2. Turn the three locking tabs outwards to release the air plate.

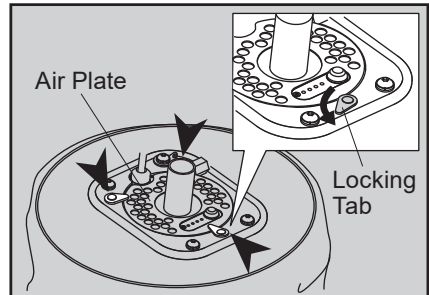


3. Remove air plate and filter.

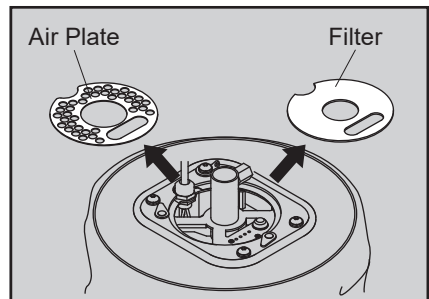

4. Install a new filter and reinstall an air plate.

Turn three locking tabs inwards to lock the air plate in place.

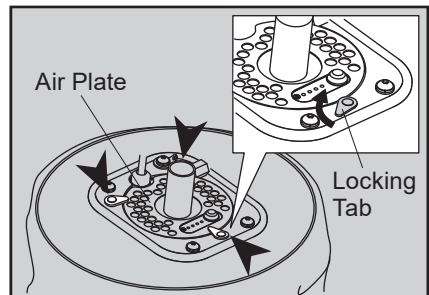


◆ Optional Message Strip

- Prepare the optional message strip.



- Attach the message strips to the velcro.

© Message strips fit on both sides of the balloon.

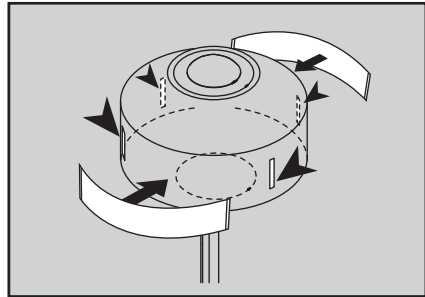

⚠ WARNING

Always place the messages strips firmly to avoid being blown away by strong winds.

Maintenance

■ Inspection/Maintenance

For a prolonged life cycle and extended quality follow the recommended guidelines.


Figure	Part	Check item	Solution		
Balloon	B1	Lamp guard	Dirty, rusty or damaged?	Clean / Replace	△
	B2	LED Unit	Defective LED or broken?	Replace	◎
	B3	Balloon (Envelope)	Dirty, or ripped?	Replace	◎
	B4	Zipper	Broken?	Replace	◎
	B5	Fan motor	Not working properly?	Replace	●
	B6	Knob	Broken?	Replace	◎
Pentapod	Pe1	Pentapod	Damaged or not working properly?	Replace	○
	Pe2	Mast	deformed or damaged?	Replace	○
			Not working properly?	Replace	○
	Pe3	Latch	Damaged?	Replace	◎
	Pe4	Safe stopper	Bent or damaged?	Replace	◎
	Pe5	Lock lever	Damaged?	Replace	◎
	Pe6	Caster wheel	Damaged?	Replace	◎
Pe7	Rope	Frayed or damaged?	Replace	◎	
Electrical	E1	Power cable	Defective or worn cable?	Replace	◎
	E2	Plug	Damaged?	Replace	○

◎ ...Daily Check ○ ...Every 20hrs ● ...Every 100hrs △ ...Every 500hrs
 (Hours are just estimation. Please inspect everytime before using the unit.)
 (Please read and follow the supplied generator manual for the generator.)

 DANGER



Never attempt to service or perform maintenance when the power is ON. The possibility exists of short circuit. Please pull out the power plug from the power source.

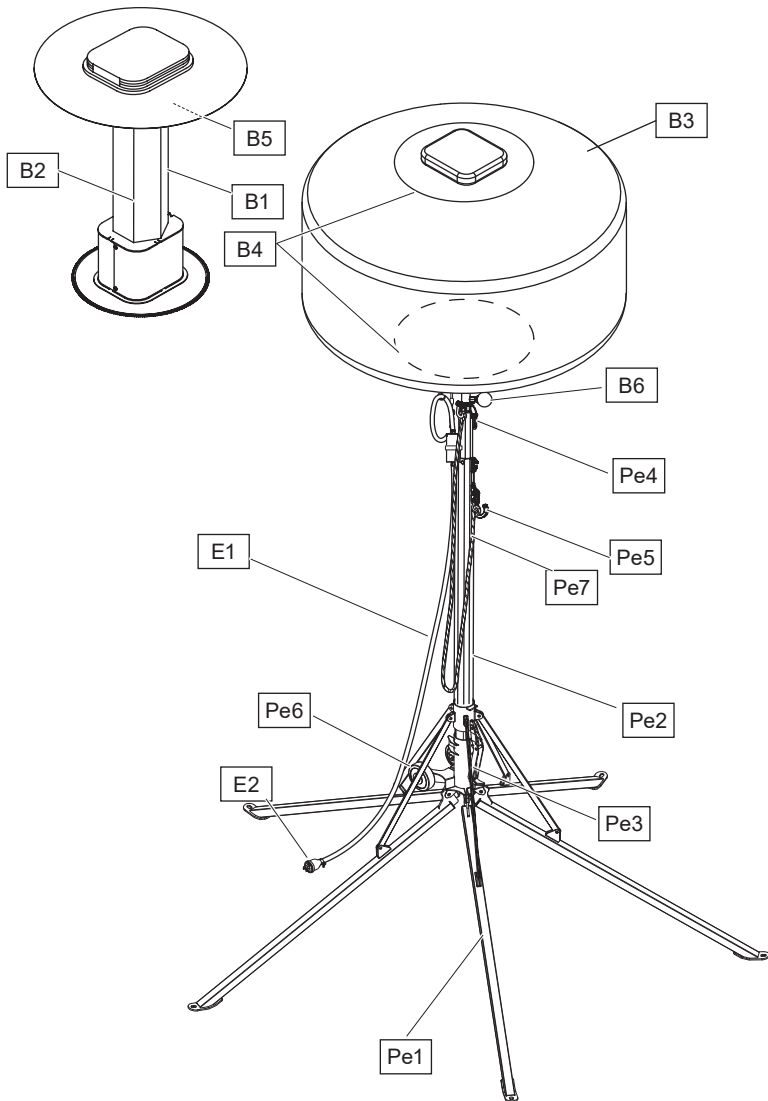


■ How to stow


- Take off the mud or dirt, and please apply the lubrication grease up the metal part.
- Avoid stowing in area that can be exposed to the rain, or high humidity.
- Take apart the components separately and stow them in each cases.
- Use grease for the maintenance. Do not apply parts-cleaner of the mast.

◆ Trouble Shooting

1.Circuit Diagram

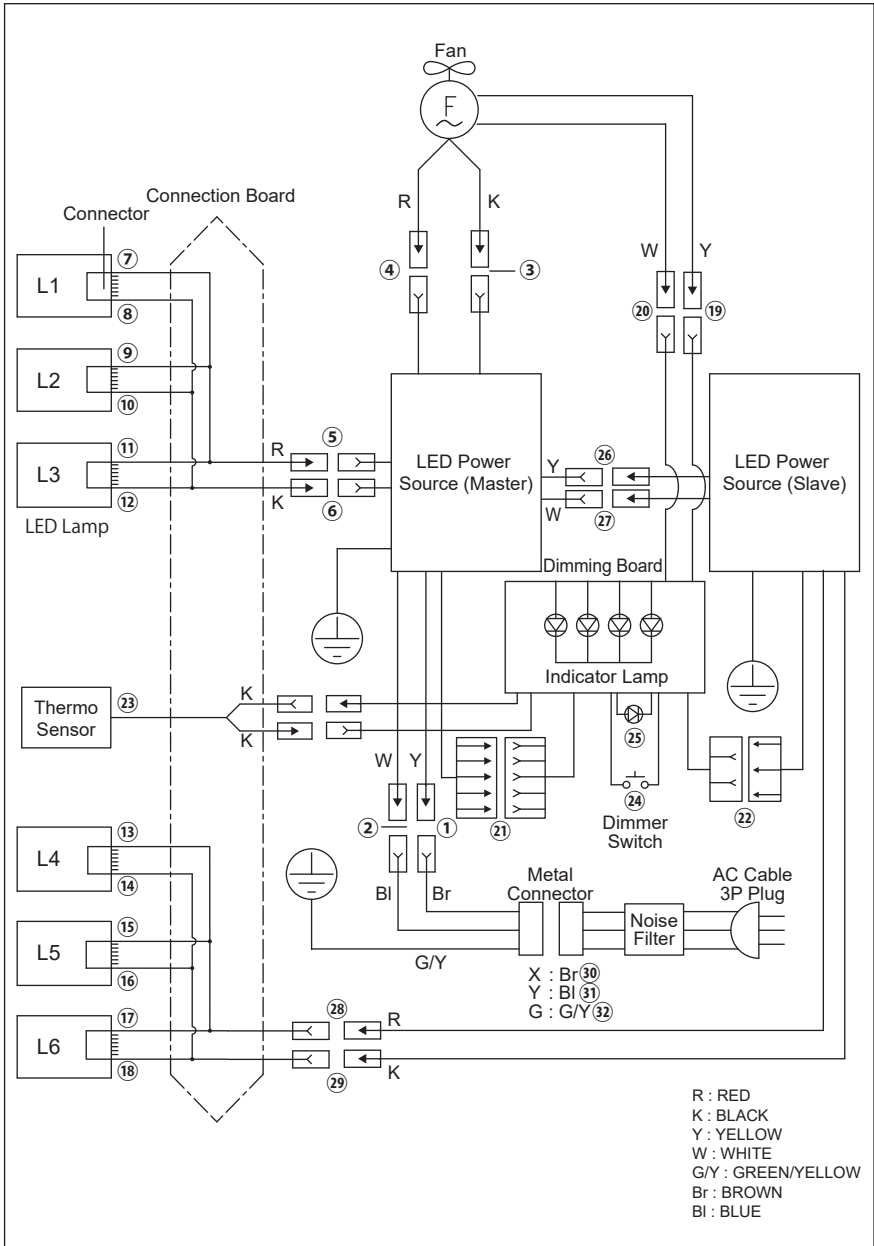


2.Faulty Operation of Lamp

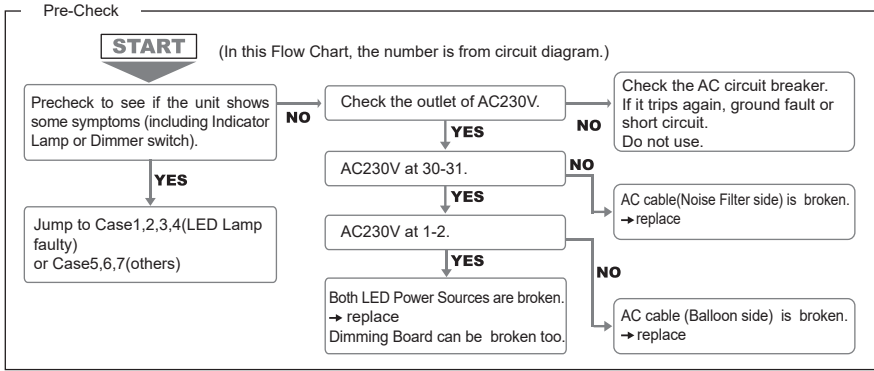


Lamp is not working


CASE1 Every LED Lamp is not working.

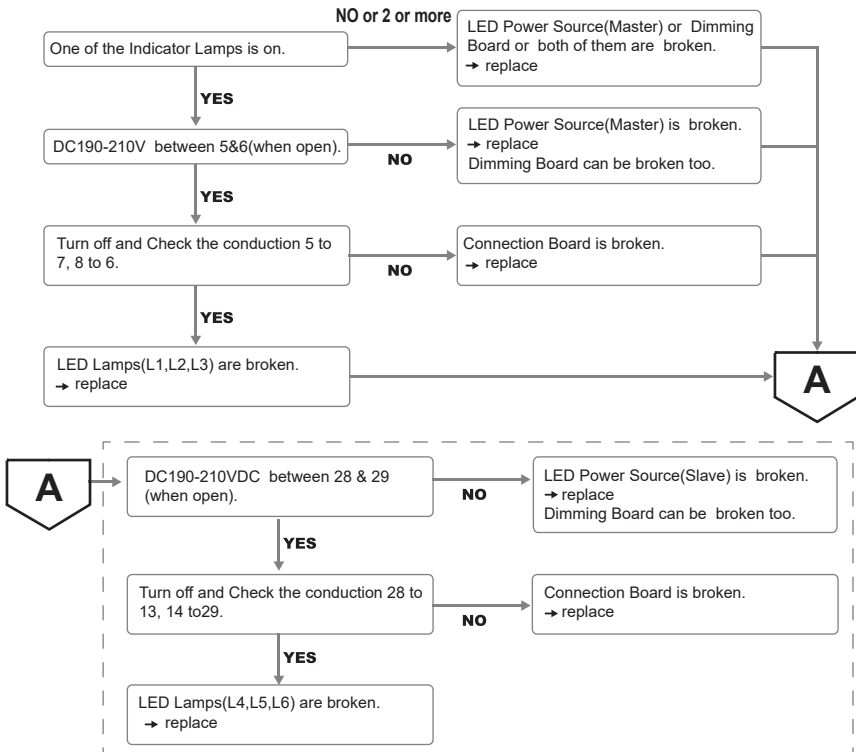

CASE2 Half of LED Lamps(180 degree) are not working.

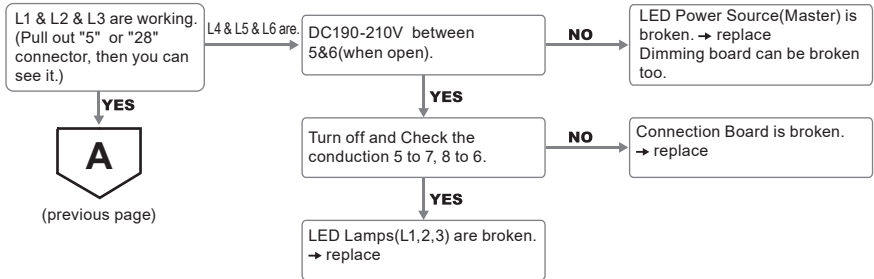


CASE3 Entire 1 or 2 boards of LED Lamps are not working.

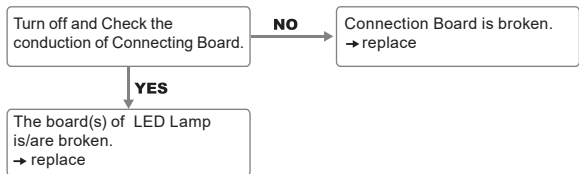

CASE4 One or some LED chips are not working.

The chip(s) is /are broken.
→ replace the LED Lamp board(s).


CASE5 The brightness of LED is dark.

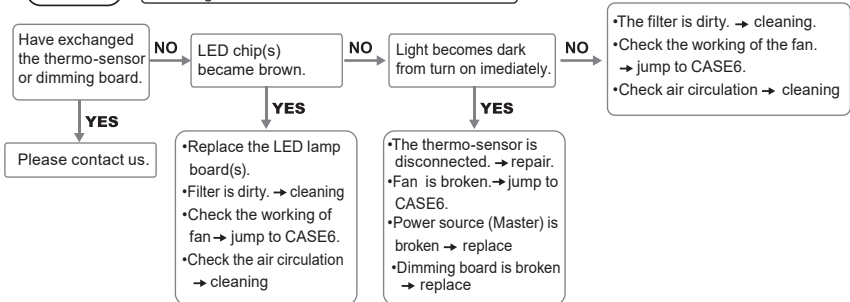

Fan is not operating

CASE6


Fan is not working.

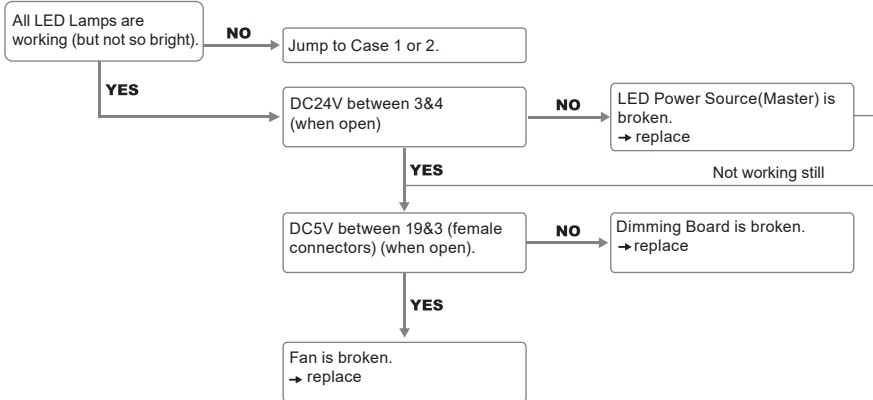

Dimming control trouble

CASE7


Dimmer switch does not work.

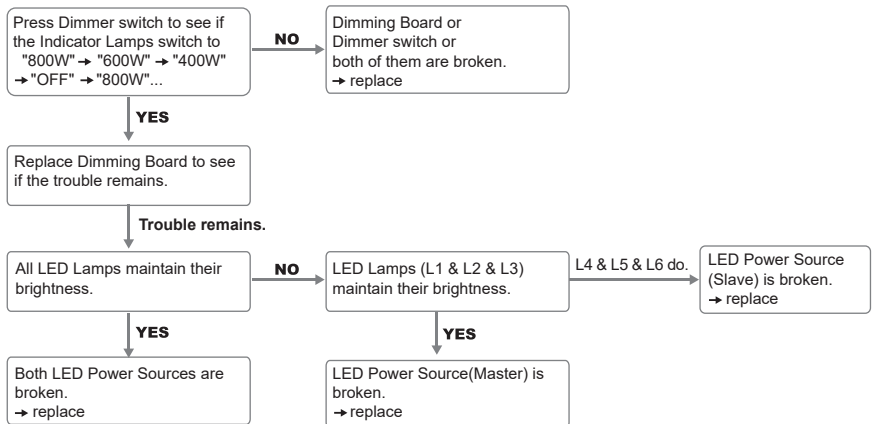

It is not in silent mode

CASE8

It can not be switched to the silent mode.

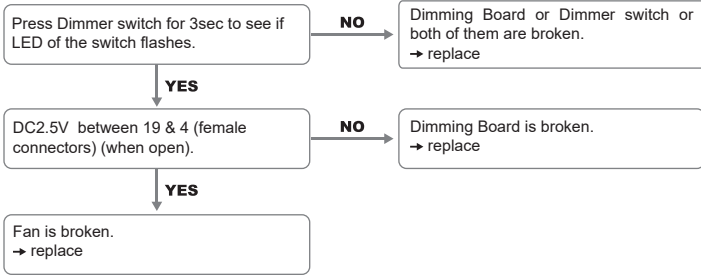


3.Lack of air in balloon

Balloon is not inflating fully


- 1 Zipper is open. → Close the zipper completely.
- 2 Balloon cloth is ripped. → Repair or exchange the balloon cloth.
- 3 Filter is clogged. → Clean up or replace the filter.
- 4 LED is operating silent mode. → Press the dimmer switch and hold it for 3 sec.

How to clean up the filter


■Removing the filter

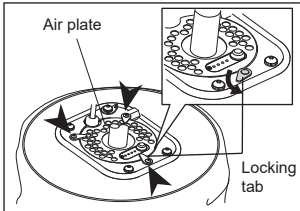

Turn the balloon lamp assembly upside down to access the filter. Turn the three locking tabs outwards to release the air plate.

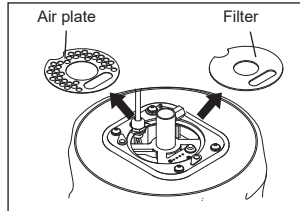


Remove air plate and filter.

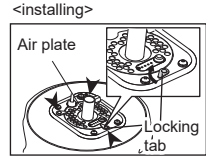

Take opposite steps of removing the filter.

■Easy Cleaning

●Use hands

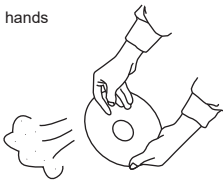

●Use vacume cleaner



■Washing

- Please use a mild detergent when washing with a detergent.
- Please use a washing net when using a washing machine.
- Please dry it thoroughly before installing it.
→If you installed without drying it thoroughly, the absorption would be insufficient. (It may freeze during winter.)

Please replace it when the tar is attached.

4.Other

Lamp is not operating

Possible problem	Solution
Is power plug plugged in properly?	Plug in to the power source.
Is generator's main switch turned ON?	Turn ON the switch.
Are there any wire cables disconnected?	Fix the relevant section.
Are any other equipments connected to the generator?	Disconnect other equipments.
Is voltage of the generator normal? (stand by V at $230V \pm 5V$)	Use proper voltage.

◆ Specification

		Model	B8Q5J-CE	
		Voltage (V)	230 *1	
		Frequency (Hz)	50 / 60	
		Power Consumption (W)	860	
		Input Current (A)	3.75 (230V)	
		Power Factor	0.90 or higher	
		Type	LED / Balloon	
		Dimming Control (W)	800 / 600 / 400	
		Total Luminous Flux (lm)	110,000 / 90,000 / 67,000 *2	
		Light Distribution (°)	360	
		Outside Temperature (°C)	-10 to 40	
Lighting system	Mast	Mast Type		Telescopic system up to 3rd Height (with gas spring)
		Mast Operating		Self-rising / manual contraction
	Dimension	1st Level (LxWxH) (mm)		2200x 2255 x 2225 - 4310
		2nd Level (LxWxH) (mm)		1945 x 2005 x 2625 - 4710
		Storage (LxWxH) (mm)	Balloon	220 x 200 x 700
	Pentapod		245 x 275 x 1455	
	Mass	Balloon (kg)		10.8
		Cable (kg)		1.6
		Mast (kg)		8.0
		Pentapod (kg)		16.0
Total Mass (kg)		36.4		
Appropriate Generator			Output 0.9kVA or more	

*1 Voltage 90-240V are available when power plugs are changed.

*2 Indicated numeric value is the Maximum.

- LED chips differ from one case to the next on the production process, they have their own brightness and color temperature.
- Suitable to indoor and outdoor use.
- All features and specifications are subject to change without notice.
- There are cases where the actual item and figure in the text different.
- May not light up due to a problem of matching the generator.
- The basic insulation is maintained between the LV power and control conductors.

◆ Disposal

Your LIGHT BOY mobile lighting system mainly consists of metallic materials that can be re-melted in steelworks and smelting works and that is therefore almost infinite recyclable.

LIGHT BOY mobile lighting system contains substances that may adversely affect the environment and human health. Proper disposal can prevent adverse effects on the environment and human health. When disposing a used product, please contact the dealer or the sales store nearby where you purchased the product. Alternatively, dispose all components according to the applicable disposal regulations.



Never throw the product in municipal waste. This symbol of the crossed out wheeled bin indicates that product (electrical and electronic equipment) should not be placed in municipal waste.



Signifies low-density polyethylene.



Signifies corrugated fiberboard.

MEMO

◆ How to get help

When you have questions or the towers breakdown, please take note the followings, and contact the dealer or the sales store nearby.

- Unit model and Serial number (on nameplate)

B8Q5J-CE - ○○○○○○

- Use environment


How did you use?

- How long did you use?

Approx hours of use. Please verify at hour meter on generator.

- Please describe in detail when breaking down.

The detailed situation

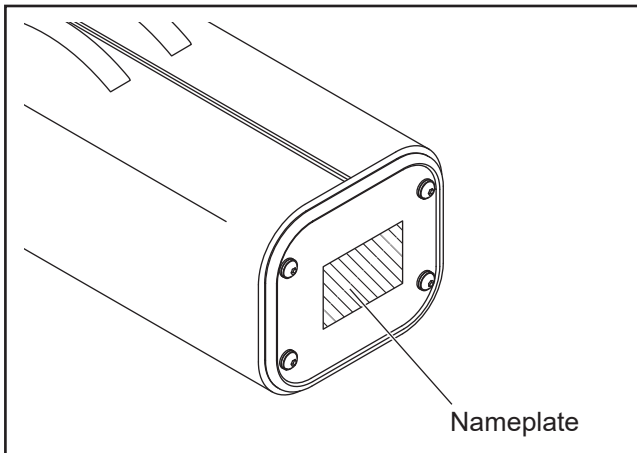

Explanation of safety confirmation

Models	Manufacturing number No.
--------	-----------------------------

From the following sales presenter, I was received for an explanation safe handling and operation of this product.

Description content and points to be checked	Check	Description content and points to be checked	Check
Receiving the manual	<input checked="" type="checkbox"/>	Ways to operate each part of the machine	<input checked="" type="checkbox"/>
Description of caution of safety	<input type="checkbox"/>	Ways of maintenance	<input type="checkbox"/>
Description of the content on alarm display and labels location	<input type="checkbox"/>	Treatment and cotact in case of trouble found	<input type="checkbox"/>
Ways of preparation for use	<input type="checkbox"/>	About warantry and guaranteed provision	<input type="checkbox"/>

Date of description	
Delivery date	

C u s t o m e r	Address	
	Company name	()
	name	
D e a l e r	Address	
	Store name	()
	Name of delivery explainer	

Distributed by :

LIGHT BOY EUROPE AB

Södra Industrigatan 3 , port 17

SE-274 30 SKURUP, Sweden

<https://www.light-boy.eu>

Manufacturer :

LIGHT BOY CO.,LTD.

1-39-1 Yazaki-cho, Fuchu-shi,

Tokyo Japan

<https://www.light-boy.com>

